



M-M5812

5.8" TFT LCD monitor



ALDINET Spa
Viale C. Colombo, 8
20090 Trezzano s. Naviglio (MI)
ITALY

INSTRUCTION MANUAL

MONITOR:



1. Indicator Light
2. R/C Window
3. Power
4. Mode
5. Negative Decrease
6. Menu
7. Positive Increase

CAUTION:


For your safety, please rotate the angle of the display or turn off the display while driving.

SPECIAL STATEMENT:

LCD may have a few bright dots, which is normal for the matrix display technology, and doesn't indicate defects of faults

NOTICE:


- Please operate instruction manual completely before use;
- The unit is manufactured with precision elements pay attention to protection against dampness;
- Prevent the hard object from scratching LCD surface;
- High voltage inside non-technical authorized person is not allowed to dismantle the unit.

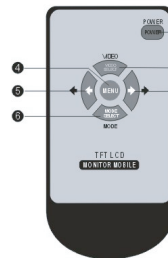

REMOTE CONTROL

1. Power
2. V1/V2 Change
3. Positive Increase
4. Menu
5. Negative Decrease
6. Mode Selection

 Connection



MONITOR ONLY

SPECIFICATIONS:

- Display size: 5.8 inch (16:9)
- Resolution: 400*RGB*234
- Power supply: DC 12V
- Input: Dual video input; One audio input
- System: PAL/NTSC auto switching
- All functions are controlled by remote control; OSD menu
- Blue screen when no signal