


# COMFORT ADAPTER<sup>®</sup>

## CTSAD00C

**HARD WIRED REMOTE CONTROL INTERFACE**  
**Adaptateur commande au volant / Stuurafstandsbediening / Lenkradbedienung**

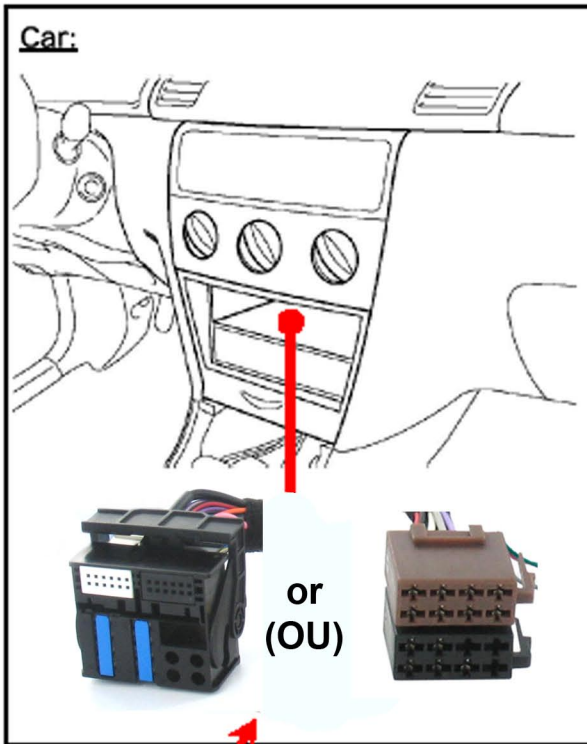


**Audi**  
**A3 2003>**  
**A4 2005>**  
**TT 2006>**



**Tools/Outils/Gereedschap/Werkzeug:**



1. Pink Wire (Rose) - Speed Pulse (Impulsion de Vitesse)
2. Green/White Wire (Vert/Blanc) - Park Brake (Frein à main)
3. Purple/White Wire (Violet/Blanc) - Reverse (Marche arrière)
4. Blue Wire (Bleu) - Amp Remote
5. RCA Plugs - Front and Rear, for maintaing amplified systems. Connect to Pioneer pre-outs.

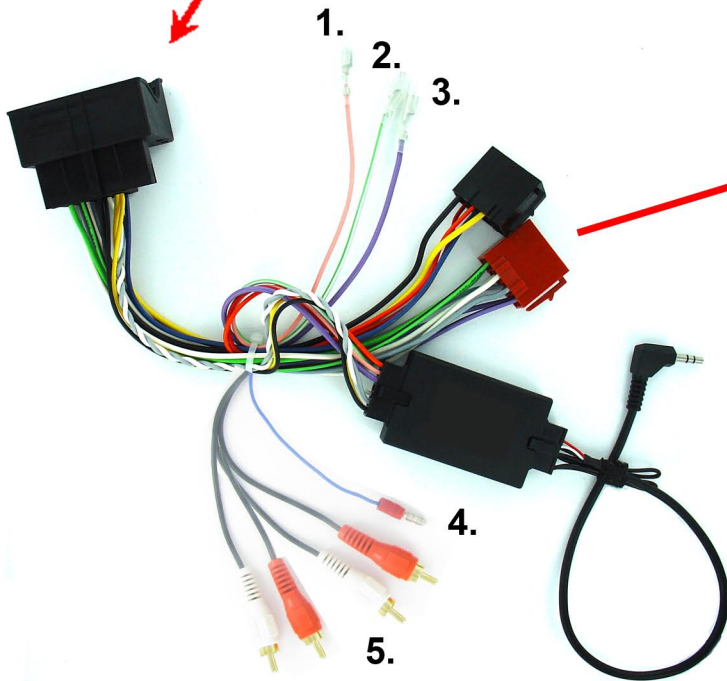


**Autoradio:**



lock Front view  
 ISO power connector:  
 2 4 6 8  
 1 3 5 7

A1 = Speed Signal - Blue/Black Wire  
*Impulsion de Vitesse - Bleu/Noir*  
 A2 = Reverse Gear - Purple Wire  
*Marche arrière - Violet*  
 A3 = Not Connected  
*Non relié*  
 A4 = +12 Volts - Yellow Wire  
*+12 Volts - Jaune*  
 A5 = Antenna Remote  
*Extérieur d'antenne*  
 A6 = Illumination - Orange Wire  
*Illumination - Orange*  
 A7 = Ignition - Red Wire  
*Ignition - Rouge*  
 A8 = Ground - Brown Wire  
*La terre - Brun*

**Navigation:**

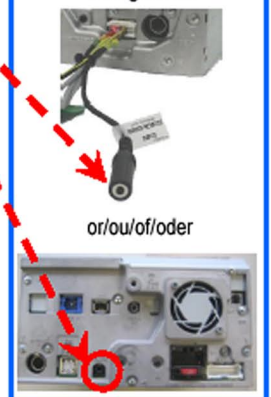

e 6  
 020094



Subject to change in terms of construction, equipment and color, and may contain errors. The information and illustrations are non-binding.  
 Die Beschreibung kann von der tatsächlichen Ausstattung abweichen. Änderungen in der Ausstattung und der Farbe sowie Irrtum Vorbehalten. Daten und Abbildungen unverbindlich.  
 Wijziging met betrekking tot constructie, uitvoering en kleur evenals vergissingen voorbehouden. Gegevens en afbeeldingen niet bindend.  
 Sous réserve de modification de la construction, de l'équipement, de la couleur et sous réserve d'erreurs. Les indications et les illustrations sont sans engagement.

**Pioneer**