


HARD WIRED REMOTE CONTROL INTERFACE
Adaptateur commande au volant / Stuurafstandsbediening / Lenkradbedienung

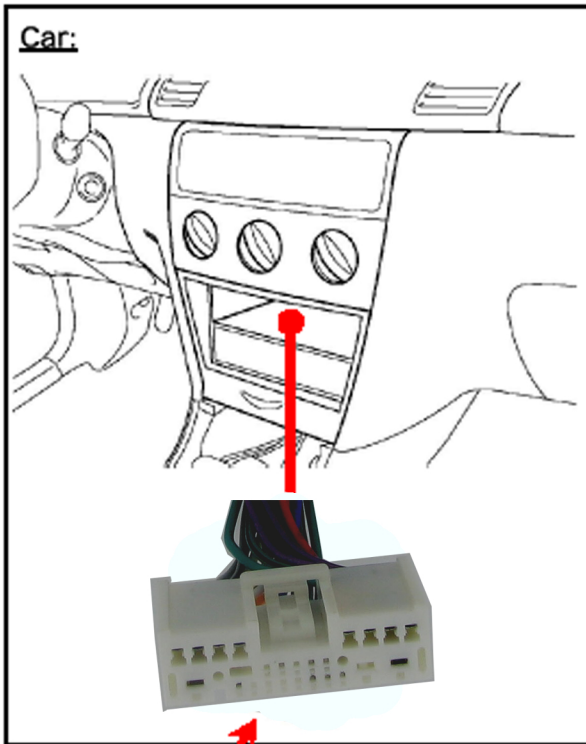

Mazda
CX-7 2007>
With Bose System



Tools/Outils/Gereedschap/Werkzeug:




Phillips

Autoradio:




1. Blue Wire (Bleu) - Amplifier Remote (Extérieur d'amplificateur)

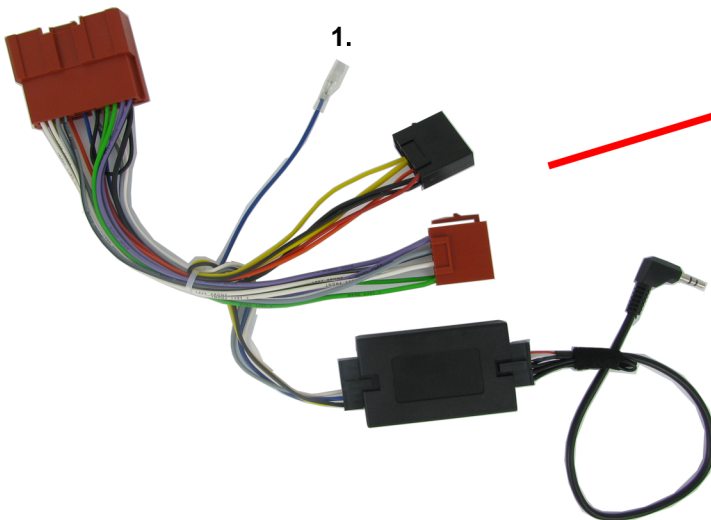

lock	Front view
ISO power connector:	
2	4 6 8
1	3 5 7

A1 = Speed Signal - Blue/Black Wire
Impulsion de Vitesse - Bleu/Noir
A2 = Reverse Gear - Purple Wire
Marche arrière - Violet
A3 = Not Connected
Non relié
A4 = +12 Volts - Yellow Wire
+12 Volts - Jaune
A5 = Antenna Remote
Extérieur d'antenne
A6 = Illumination - Orange Wire
Illumination - Orange
A7 = Ignition - Red Wire
Ignition - Rouge
A8 = Ground - Brown Wire
La terre - Brun

Navigation:

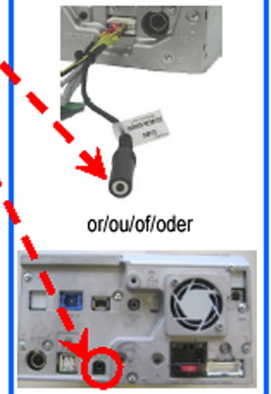

User Guide

To adjust Clock:

1. Press and hold MODE button for 2 seconds.
2. The vehicle screen will now display "SETTINGS"
3. Press MODE button to select this option.
4. The screen will now display "INFO/CLOCK"
5. Press and hold track down to enter time adjust mode
6. Press track up to increment the time digit
7. Press track down to move onto next time digit.
8. Press MODE button to exit or wait for 10 seconds



To adjust Fader:

1. Press and hold MODE button for 2 seconds.
2. The vehicle screen will now display "SETTINGS"
3. Press the track down button until the vehicle display shows "FADER ADJUST"
4. Press the MODE button to select this option.
5. Using the track up and down button will now adjust the vehicles fader.
6. Press MODE button to exit or wait for 10 seconds

To access Trip information:

1. Press and hold MODE button for 2 seconds.
2. The vehicle screen will now display "SETTINGS"
3. Press MODE button to select this option
4. The screen will now display "INFO/CLOCK"
5. Press track up (do not hold) to access Trip information
6. Keep pressing track up to scroll through different trip information.
7. Press track down to return to clock display
8. Press MODE button to exit or wait for 10 seconds