







ALDINET Spa Viale C: COlombo, 8 20090 Trezzano s. Naviglio (MI)

INSTRUCTION MANUAL

MONITOR:



- 1. Indicator Light
- 2. R/C Window
- 3. Power
- 5. Negative Decrease
- 7. Postive Increase

CAUTION:


For your safety, please rotate the angle of the display or turn off the display while driving.

SPECIAL STATEMENT:

LCD may have a few bright dots, which is normal for the matrix display technology, and doesn't indicate defects of faults

NOTICE:


- •Please operate instruction manual completely before use;
- •The unit is manufactured with precision elements pay attention to protection against dampeness;
- Prevent the hard object from scratching LCD surface;
- •High voltage inside non-technical authorized person is not allowed to dismantle the unit.

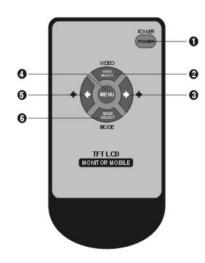

REMOTE CONTROL

- 1. Power
- 2. V1/V2 Change
- 3. Positive Increase
- 4. Menu
- 5. Negative Decrease
- 6. Mode Selection

 Connection



SPECIFICATIONS:

- Display size: 7 inch (16:9)
- Resolution: 1440(w)x234(h)
- Power supply: DC 12V
- Input: Dual video input; One audio input R/L audio input
 System: PAL/NTSC auto switching
- All functions are controlled by remote control; OSD menu
- Mode: 16:9 and 4:3 auto switching
- Blue screen when no signal