#### **APPLICATIONS**

# 2006 Honda Civic


#### **KIT FEATURES**

- DIN Head Unit Provision with pocket
- ISO DIN Head Unit Provision with pocket
- Double DIN Head Unit Provision
- ISO Stacked Head Unit Provision
- Stacked DIN Head Unit Provision



#### KIT COMPONENTS

A) Radio Housing B) DDIN Trim Plate C) ISO Trim Plate D) Double DIN Brackets E) Pocket

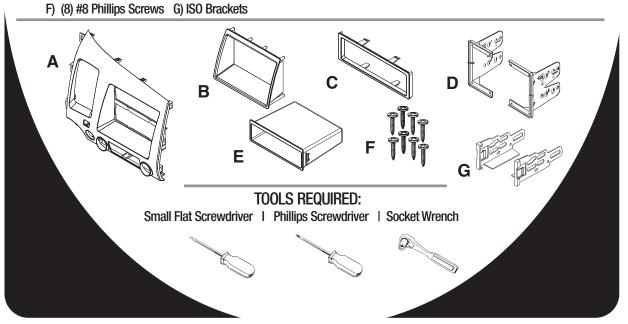



# **TABLE OF CONTENTS**


| <u>Dash Disassembly</u>             |      |
|-------------------------------------|------|
| 2006 Honda Civic                    | 1, 2 |
| <u>Kit Assembly:</u>                |      |
| DIN Head Unit Provision             | ć    |
| ISO DIN Head Unit Provision         | 4    |
| Double DIN Head Unit Provision      | £    |
| Stacked ISO DIN Head Unit Provision | θ    |
| Stacked DIN Head Unit Provision     |      |
| Final Assembly                      |      |


### **2006 HONDA CIVIC**

- 1 Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2 Unclip and remove the panel below the steering wheel. (Figure A)
- 3 Remove the (1) Phillips screw exposed on the lower left side of the panel above the steering wheel and around the instrument cluster. (Figure B)
- 4 Unclip and remove the panel around top of steering wheel and instrument cluster. (Figure C)
- Remove panel inside pocket below radio and climate controls then remove (2) 8 MM screws facing up behind panel. (Figure D)

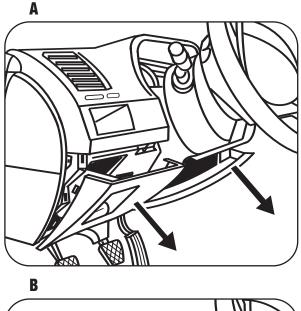

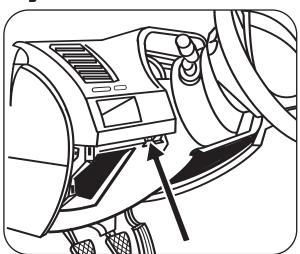


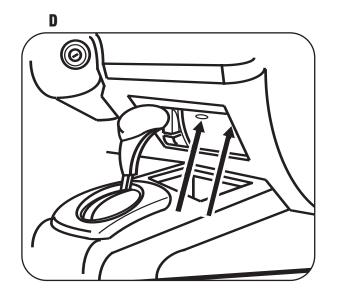


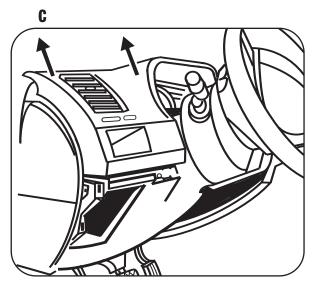

#### **2006 HONDA CIVIC**


- 6 Unclip and remove radio/climate control assembly. (Figure E)
- 7 Remove (3) Phillips screws securing the a/c vent to the radio/climate control panel. (Figure F)
- 8 Remove the (4) Phillips screws securing the climate control to the radio/climate control panel. (Figure F)
- 9 Remove the (2) Phillips screws securing the hazard switch to the radio/climate control panel. (Figure F)
- 10 Remove the (2) Phillips screws securing the passenger air bag on/off light to the radio/climate control panel. (Figure F)

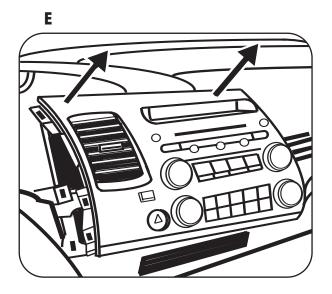


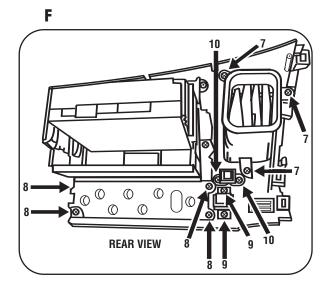



### **DIN HEAD UNIT PROVISION**

- 1 Slide the pocket into the bottom section of the kit housing. (Figure B)
- 2 Slide the DIN cage into the Radio Housing and secure by bending the metal locking tabs down. (Figure C)
- 3 Slide the aftermarket head unit into the cage and secure. (Figure D)

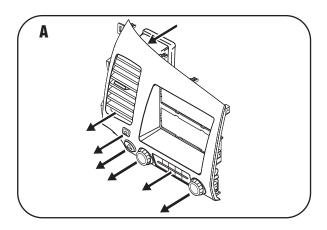

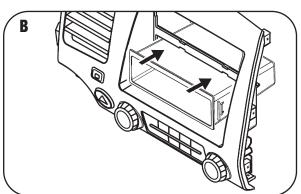


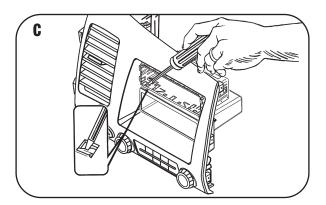


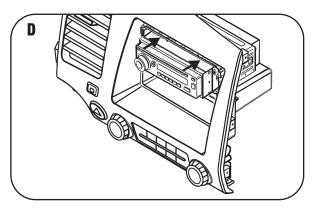



### **ISO DIN HEAD UNIT PROVISION**

- 1 Slide the pocket into the bottom section of the kit housing. (Figure B)
- 2 Mount the ISO Brackets to the head unit with the screws supplied with the unit. (Figure C)
- 3 Slide the head unit into the radio opening until the side clips engage. (Figure D)
- 4 Snap the Trim plate into the Radio Housing. (Figure D)

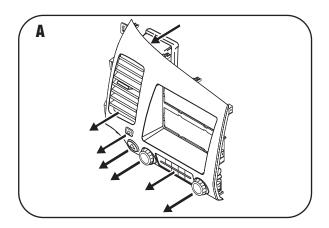

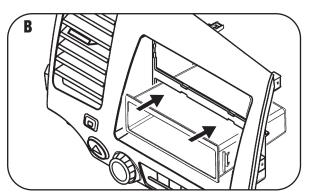


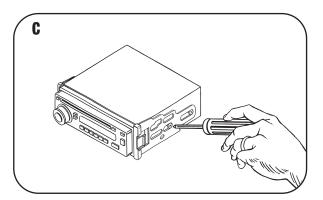


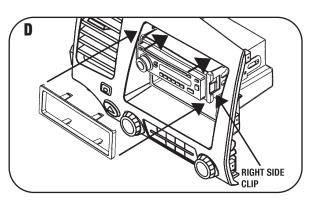



## **DOUBLE DIN HEAD UNIT PROVISION**

- 1 Remove the center bar from the radio housing. (Figure B)
- 2 Attach the corresponding bracket to the DDIN head unit. (Figure C)
- 3 Insert the DDIN trim plate into the radio housing. (Figure D)
- 4 Position the bracket/radio assembly to the back of the radio housing and secure with the (8) Phillips screws provided. (Figure D)

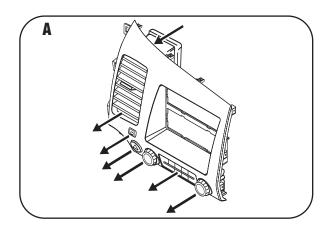

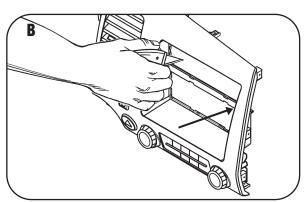


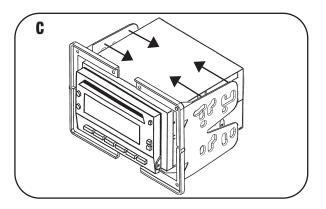


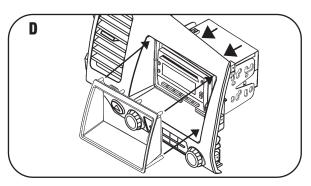



### **STACKED ISO DIN HEAD UNIT PROVISION**

- 1 Remove the center bar from the radio housing. (Figure B)
- 2 Attach the corresponding bracket to the (2) ISO head units. (Figure C)
- 3 Insert the DDIN trim plate into the radio housing. (Figure D)
- 4 Position the bracket/radio assembly to the back of the radio housing and secure with the (8) Phillips screws provided. (Figure D)

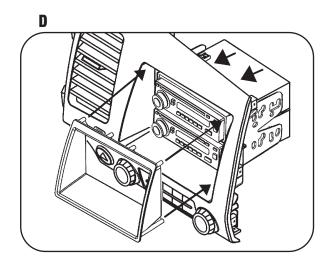

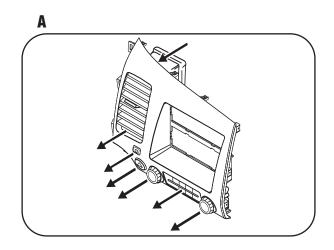

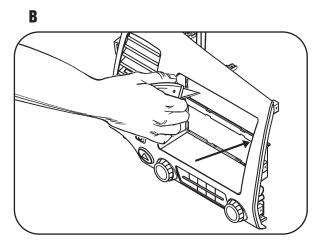

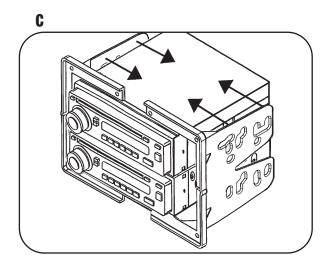

## **STACKED DIN HEAD UNIT PROVISION**

- 1 Slide the DIN cages into the Radio Housing and secure by bending the metal locking tabs outward.

  (Figure B)
- 2 Slide the aftermarket head units into the cages and secure. (Figure C)

