


**HARD WIRED REMOTE CONTROL INTERFACE**  
**Adaptateur commande au volant / Stuurafstandsbediening / Lenkradbedienung**



**Ford**


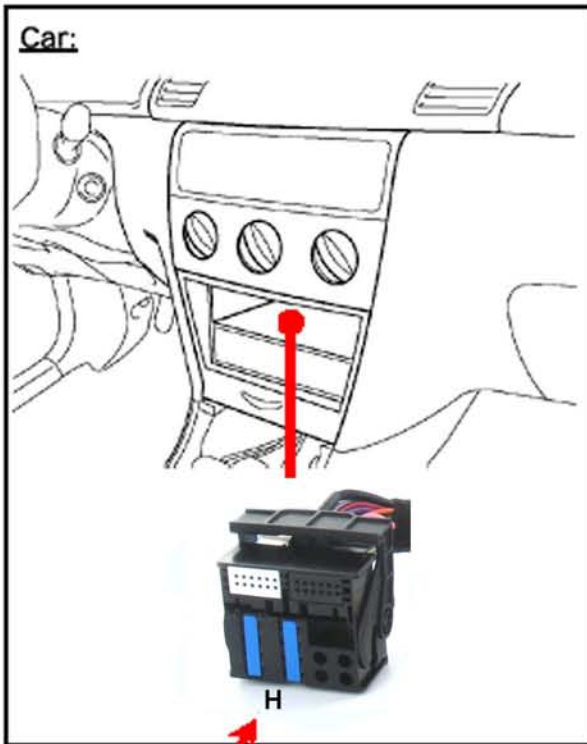


**Tools/Outils/Gereedschap/Werkzeug:**



**Torx T20**

1. Connect 3.5mm jack plug (A) to Pioneer head unit (B)
2. Connect UART cable (C) to UART cable (D)
3. Connect power/speaker harness (E) to back of Pioneer head unit (F)
4. Connect female quadlock connector (G) to vehicle quadlock connector (H)
5. Connect display plug (J) to Vehicle display
6. Connect vehicle display plug to interface (K)

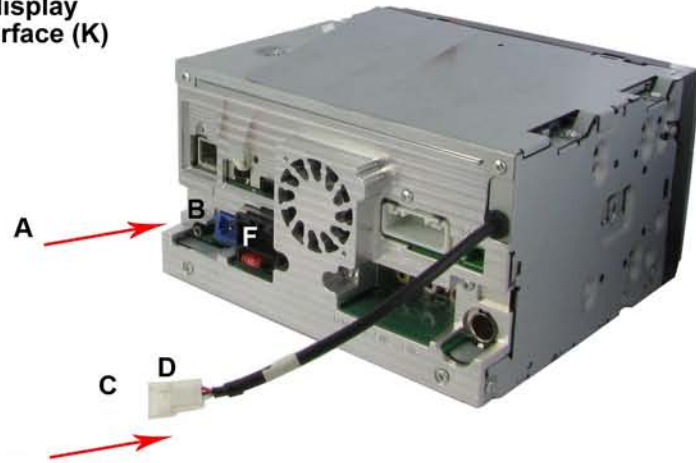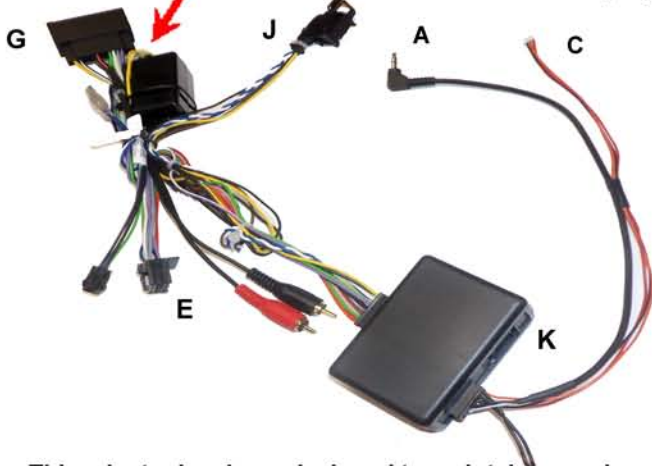

This adapter has been designed to maintain a maximum of functionality when replacing the factory radio by a Pioneer AVIC product on certain Ford vehicle models. The UART terminal is used to convey the AirCo status information functions only to the Pioneer AVIC for display purposes if the vehicle's original radio is supporting these functions.

For a list of compatible vehicles and AVIC products, please visit [www.pioneer.eu/SWI](http://www.pioneer.eu/SWI)

To avoid any problems, do not connect UART terminal other than with compatible vehicles.



035848

Subject to change in terms of construction, equipment and color, and may contain errors. The information and illustrations are non-binding. Die Beschreibung kann von der tatsächlichen Ausstattung abweichen. Änderungen in der Ausstattung und der Farbe sowie Irrtum Vorbehalten. Daten und Abbildungen unverbindlich. Wijziging met betrekking tot constructie, uitvoering en kleur evenals vergissingen voorbehouden. Gegevens en afbeeldingen niet bindend. Sous réserve de modification de la construction, de l'équipement, de la couleur et sous réserve d'erreurs. Les indications et les illustrations sont sans engagement.