



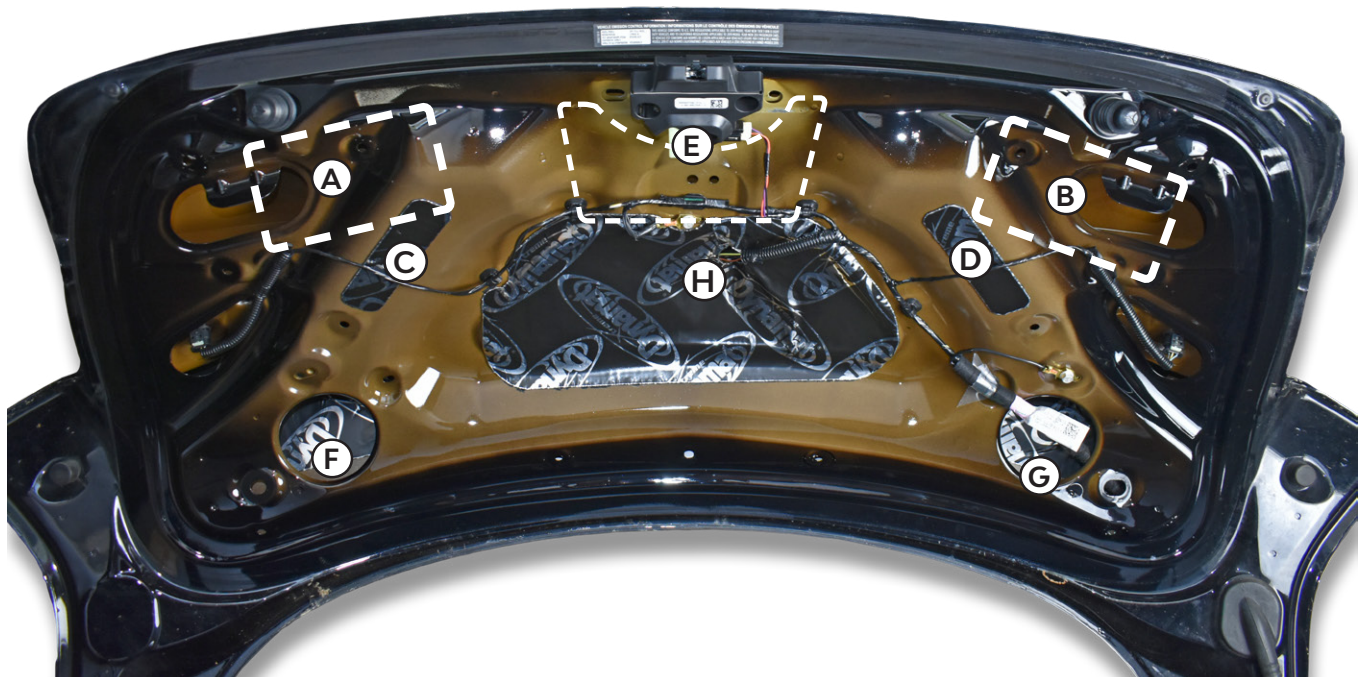

Install Dynamat as shown, align with existing brackets, supports, and holes.

**Step 1:** Outer Panel Pieces: A,B,E,F and G install on inside of outer trunk lid skin by passing through access holes in inner lid structure.

**Step 2:** F,G and H install on inner trunk lid structure where shown. Align with existing brackets, supports, and holes.

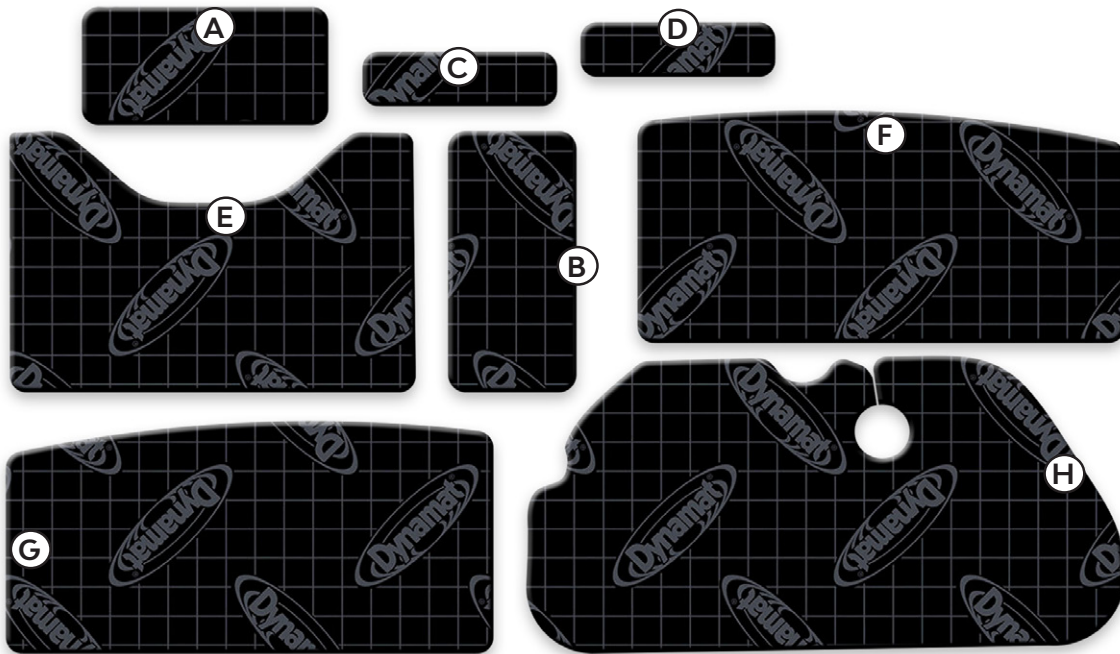

WARRANTY: Dynamat, LLC guarantees the contents of the container only for a period of one year from the date of purchase. If product is found to be defective, replacement material will be furnished free of charge or a refund of the material cost will be given at manufacturer option. Due to the fact that Dynamat, LLC has no control over proper surface preparation, application or installation methods, no guarantee as to results is offered, expressed, or implied. Dynamat LLC's liability for claims of any kind is strictly limited to the purchase price of the material.