



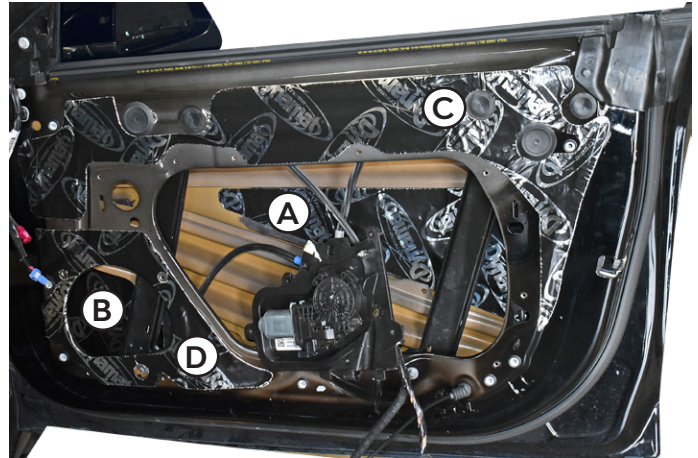

Install Dynamat as shown, align with existing brackets, supports, and holes.


**Step 1:** Outer Door Patches (A and B) - Install on inside of outer door skin by passing through access holes in inner door structure. **Step 2:** C and D - Install on inner door structure behind trim panel. Align with existing brackets, supports, and holes.

**FRONT PASSENGER DOOR** (Mirror for Drivers Side)

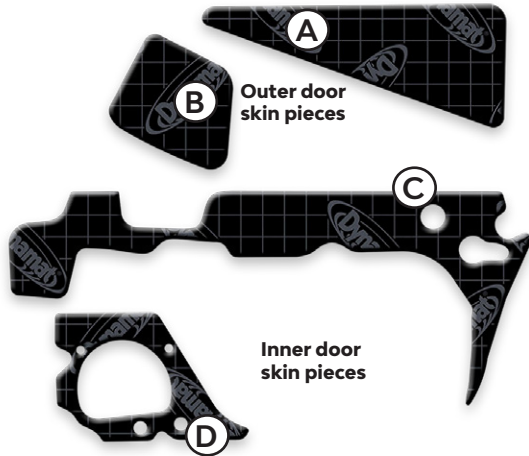



*Tip: Partially pre-peeling release paper backing and folding aluminum faces together makes this easier. Adhere to door. Smooth with Dynamat roller for best results.*

**Note:** Apply this piece to the window motor support.

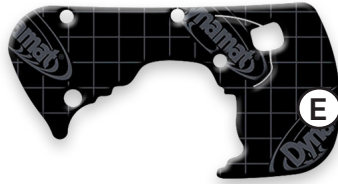

**Step 1:** Outer Door Patches (A, B and C) - Install on inside of outer door skin by passing through access holes in inner door structure. **Step 2:** D - Install on inner door structure behind trim panel. Align with existing brackets, supports, and holes.

**REAR PASSENGER DOOR** (Mirror for Drivers Side)

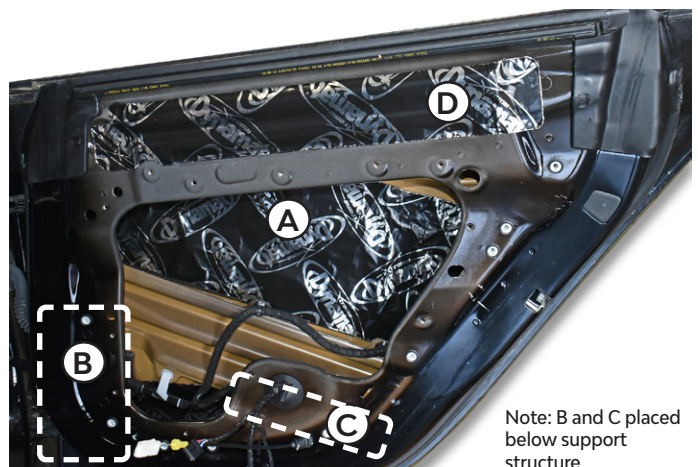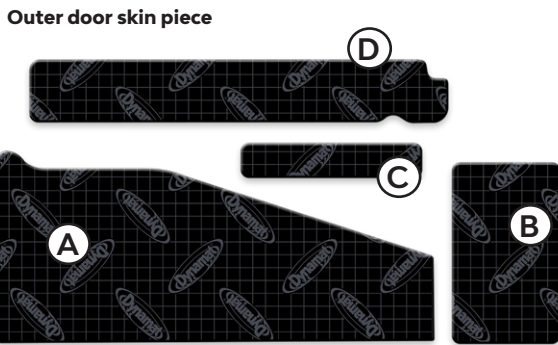

**Note:** B and C placed below support structure



**WARRANTY:** Dynamat, LLC guarantees the contents of the container only for a period of one year from the date of purchase. If product is found to be defective, replacement material will be furnished free of charge or a refund of the material cost will be given at manufacturer option. Due to the fact that Dynamat, LLC has no control over proper surface preparation, application or installation methods, no guarantee as to results is offered, expressed, or implied. Dynamat LLC's liability for claims of any kind is strictly limited to the purchase price of the material.