

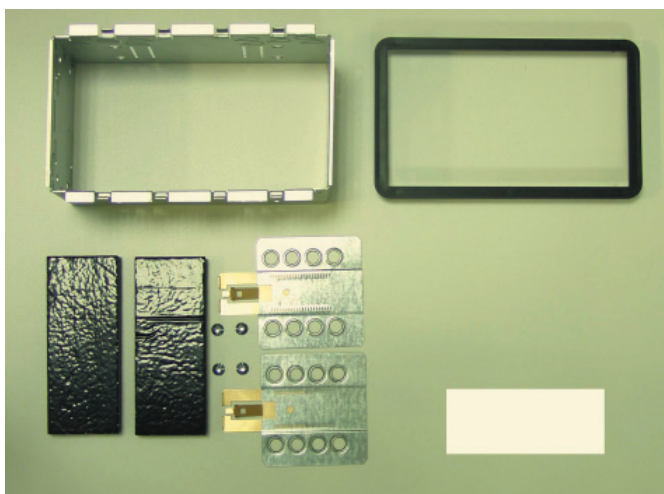


Installation manual for:  
**Alfa 159 2005 --> / Brera /  
Spider 2006 -- >**

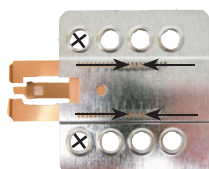

Installation kit includes the following items:



- \* 1X 2-ISO 110 mm. metal bracket
- \* 1X Radio trim
- \* 2X Mounting plates
- \* 2X Mounting spacers
- \* 4X Screws
- \* 2X Cushion
- \* 2X Radio keys

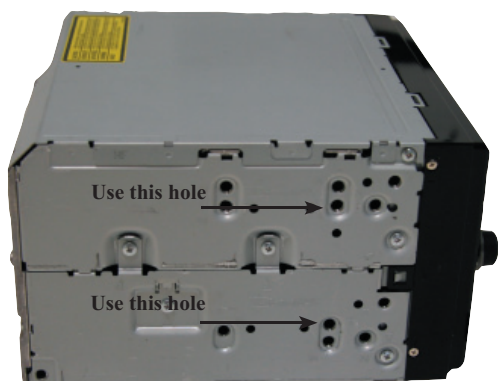

Pioneer HD1BT

We advice to use the following positions.  
Other positions are also possible.

Use position 1 marked with a cross.  
Use position 14 & 16 marked with an arrow.  
Measured from left to right.

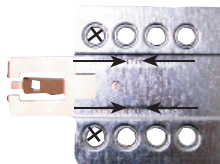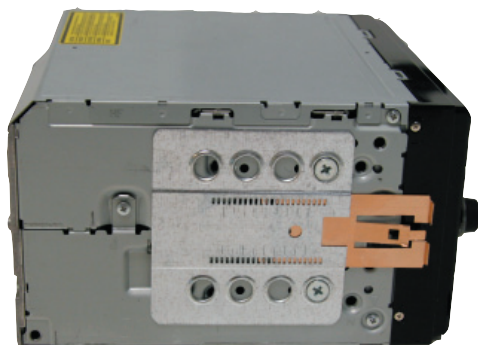

Pioneer Avic D3

We advice to use the following positions.  
Other positions are also possible.

Use position 1 marked with a cross.  
Use position 9 & 11 marked with an arrow.  
Measured from left to right.

\* Mount the plates.

# 2-DIN

# 12.301001-03

1



Remove radio using radio removal keys. Remove plastic cover around gearlever. Use wedge and start at the location of the arrows with wedge.

2



Remove 2 outside air ventilation shafts using a wedge. Start at the location of the arrows.

3



Remove 2 screws at the location of the arrows.

4




Remove 4 screws at the location of the arrows.

5



Remove original metal bracket from dashboard. Remove 4 screws at the location of the arrows.

6

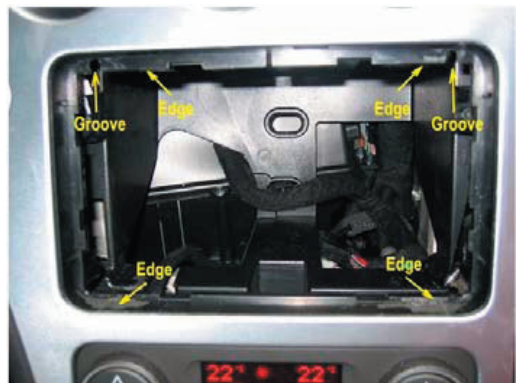

Remove 4 raised edges at the location of the arrows with remove. Make 2 grooves of 5mm wide at the location of the arrows with groove.

7



Place dashboard panel back en mount metal bracket. Connect all wiring.

8



Place back all panels in reverse order. Place head unit and place rim.

Connect all of the needed wiring harnesses and check all connections carefully