

APPLICATIONS
2003-2005 Cadillac CTS
2004-2005 Cadillac SRX




KIT FEATURES

- DIN head unit provision with a pocket
- ISO DIN head unit provision with a pocket
- DDIN head unit provision
- Stacked ISO DIN head unit provision
- Stacked DIN head unit provision

KIT COMPONENTS

A) Radio Housing | B) DDIN Brackets | C) DDIN Trim Plate | D) ISO Brackets | E) Trim Plate | F) (8) Phillips screws
| G) Pocket

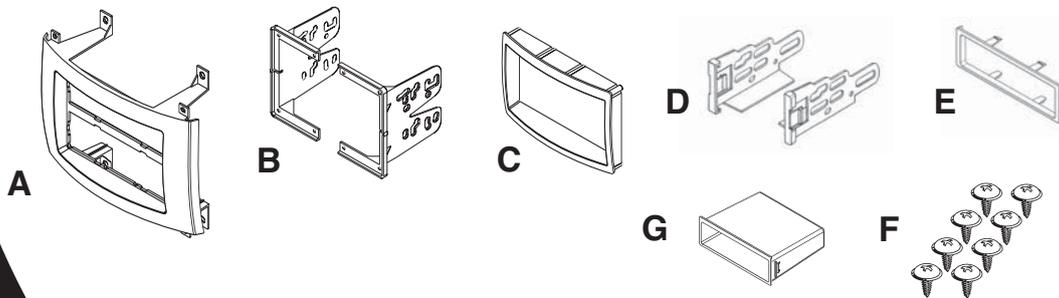

TOOLS REQUIRED:

Phillips Screwdriver | Small Flat Blade Screwdriver | Socket Wrench



TABLE OF CONTENTS





***Dash Disassembly* 1**

***Kit Assembly*2, 3, 4**

***Final Assembly* 5**

2003-2005 CADILLAC CTS **2004-2005 CADILLAC SRX**


- 1** Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2** Unclip and remove the center air vent assembly above the radio. (Figure A)
- 3** Unclip and remove the a/c control/ashtray assembly below the radio. (Figure B)
- 4** Remove (4) 10 MM screws securing the radio to the dash. (Figure C, D)

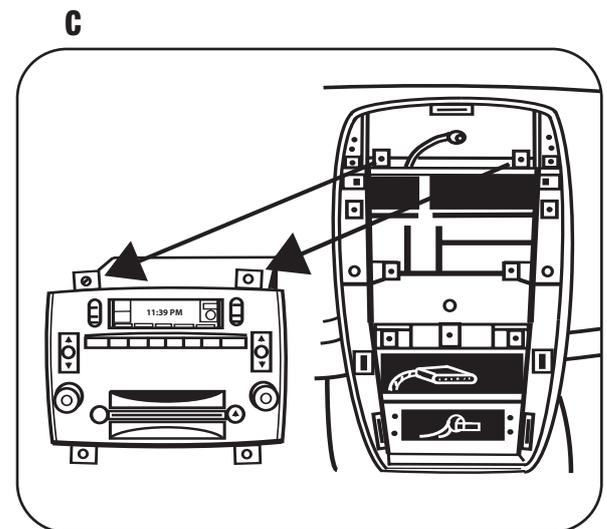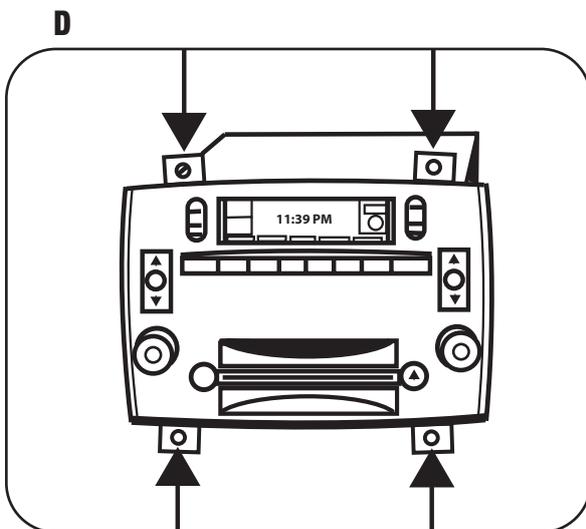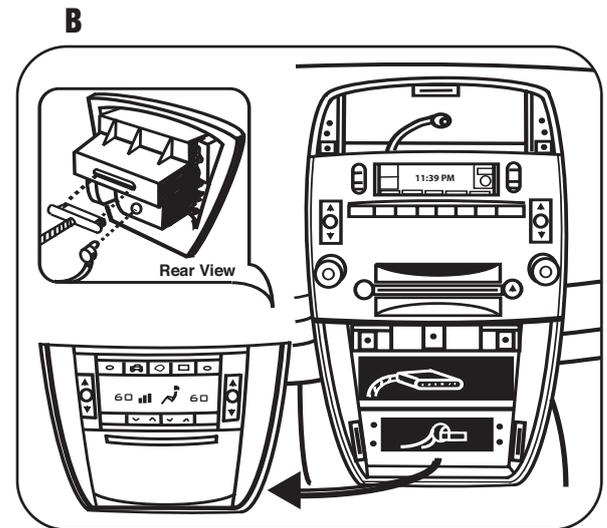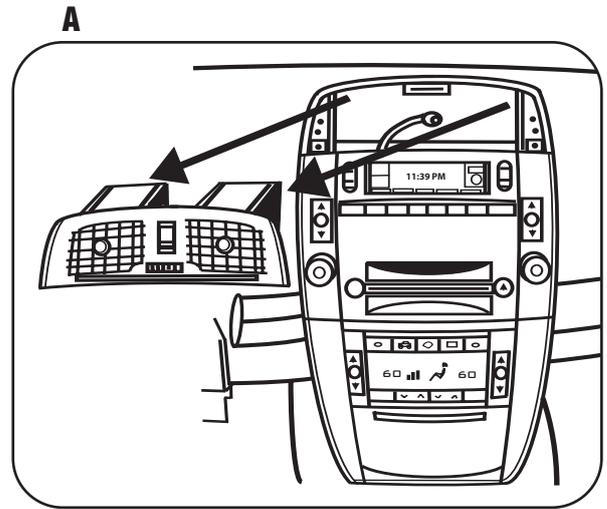


DIN HEAD UNIT PROVISION

- 1** Slide the DIN cage into the Radio Housing and secure by bending the metal locking tabs down. (Figure A)
- 2** Slide the aftermarket head unit into the cage and secure. (Figure B)
- 3** Slide the supplied pocket into the unused opening.

A

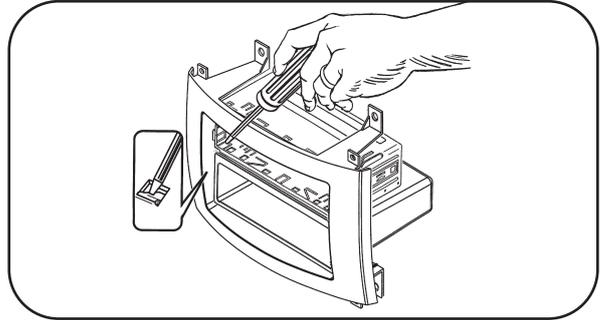


B

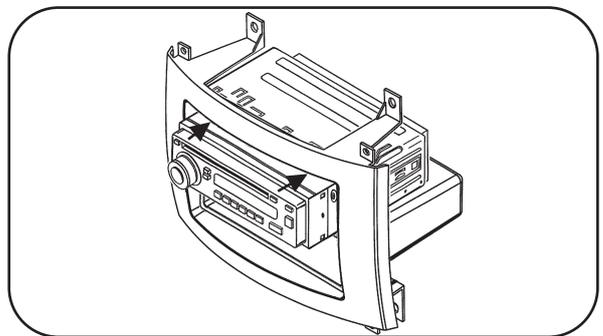


ISO DIN HEAD UNIT PROVISION

- 1** Mount the ISO Brackets to the head unit with the screws supplied with the unit. (Figure A)
- 2** Slide the head unit into the radio opening until the side clips engage. (Figure B)
- 3** Snap the Trim plate into the Radio Housing. (Figure B)
- 4** Slide the supplied pocket into the unused opening.

A




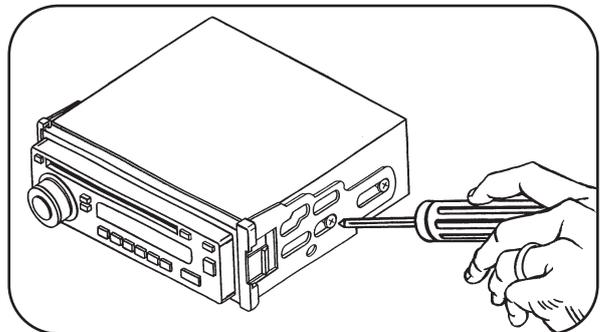


B

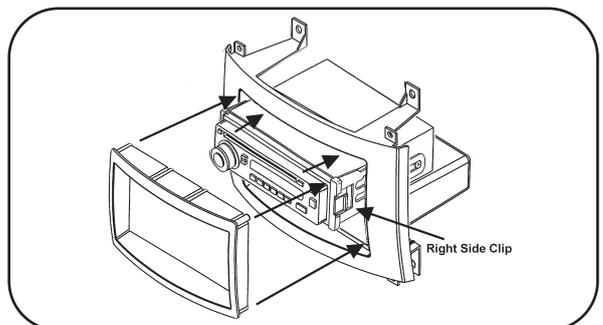

DOUBLE DIN HEAD UNIT PROVISION


- 1 Remove the center bar from the 99-2006 radio housing. (Figure A)
- 2 Attach the corresponding bracket to the DDIN head unit. (Figure B)
- 3 Insert the DDIN trim plate into the radio housing. (Figure C)
- 4 Position the bracket/radio assembly to the back of the radio housing and secure with the (8) Phillips screws provided. (Figure D)

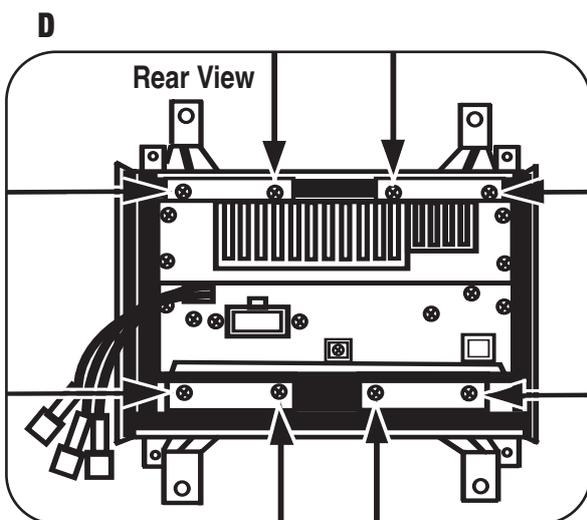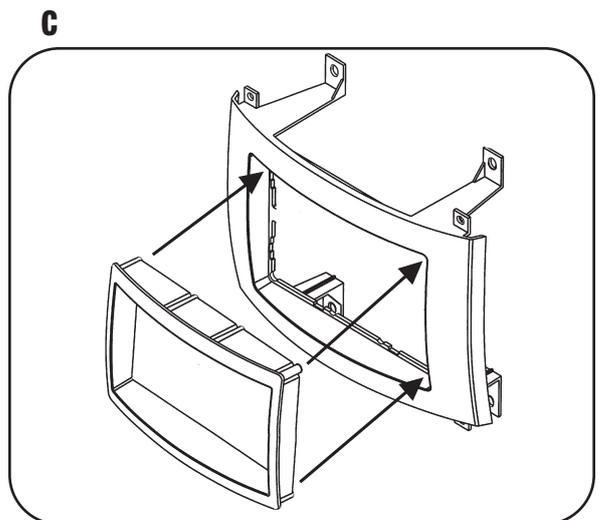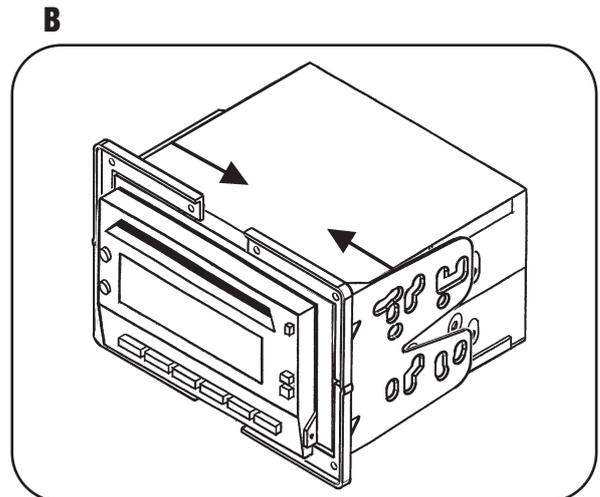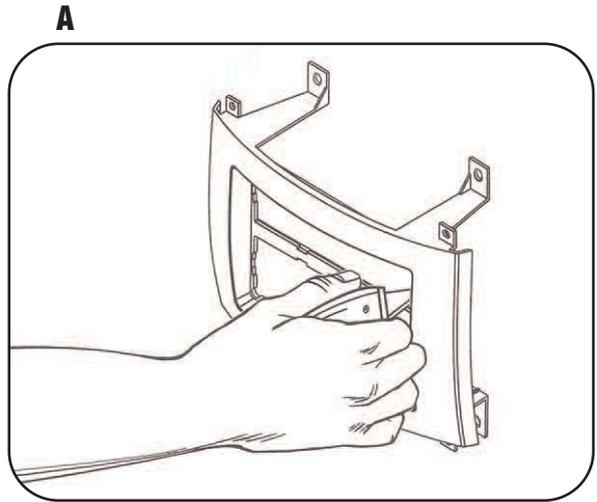


STACKED ISO DIN HEAD UNIT PROVISION

- 1 Mount the ISO Brackets to the head units with the screws supplied with the unit. (Figure A)
- 2 Slide the head units into the radio openings until the side clips engage. (Figure B)
- 3 Snap the Trim plate into the Radio Housing. (Figure B)

A

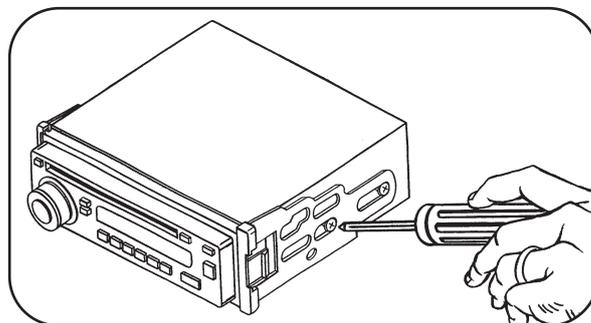


B

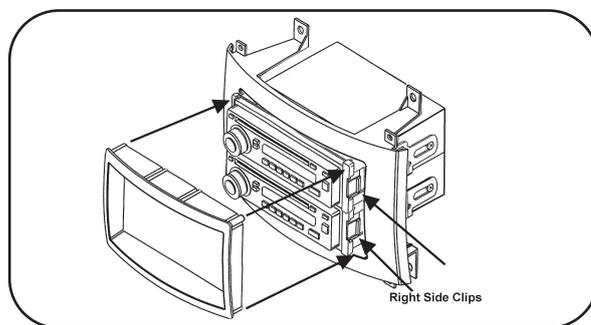

STACKED DIN HEAD UNIT PROVISION

- 1 Slide the DIN cages into the Radio Housing and secure by bending the metal locking tabs outward. (Figure A)
- 2 Slide the aftermarket head units into the cages and secure. (Figure B)

A

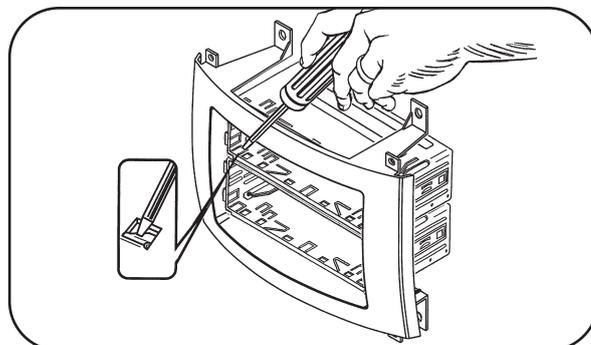

B

