



Installation manual for:
**Chevrolet Aveo/ Captiva/
Epica 2006 -->**

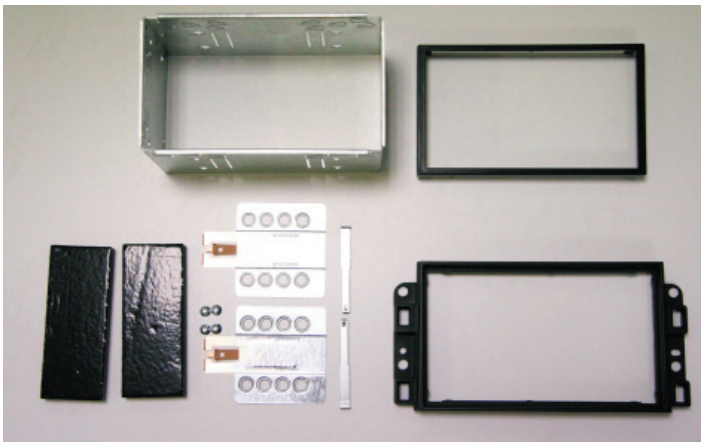

Installation kit includes the following items:



- * 1X 2-ISO 100 mm. metal bracket
- * 1X Replacement panel
- * 1X Radio trim
- * 2X Mounting plates
- * 2X Mounting spacers
- * 4X Screws
- * 2X Cushion
- * 2X Radio keys

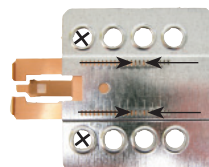

Pioneer HD1BT

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.

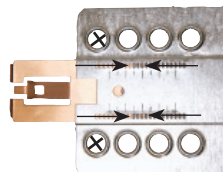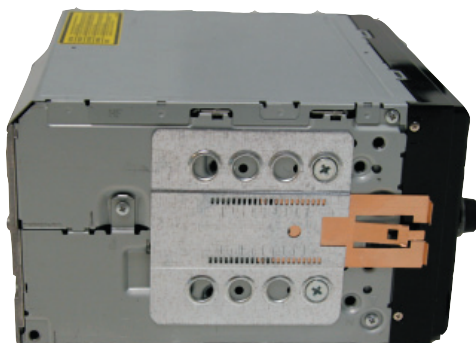

Pioneer Avic D3

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 10 & 12 marked with an arrow.
Measured from left to right.

* Mount the plates.

1



Use a plastic wig to loosen the panel.

2



Remove the four screws at the location of the arrows.

3



Place the to 2 metal bracket.

4



Place the head unit and connect all the wiring.

Connect all of the needed wiring harnesses and check all connections carefully