

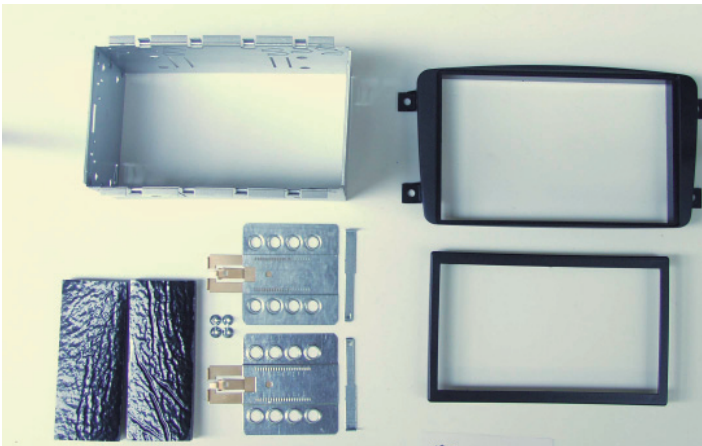


Installation manual for:  
**Mercedes Benz C-Class (W203-004) <-04-2004**  
**C- & T- Models Mercedes Benz CLK (W209-3) <-**  
**04-2004**  
**Mercedes Benz Vito (W639)**

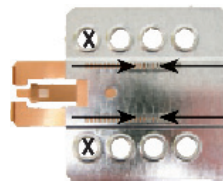

Installation kit includes the following items:



- \* 1X 2-ISO 110 mm. metal bracket
- \* 1X Replacement panel
- \* 1X Radio trim
- \* 2X Mounting plates
- \* 2X Mounting spacers
- \* 2X Radio removal keys
- \* 4X Screws
- \* 2X Cushion

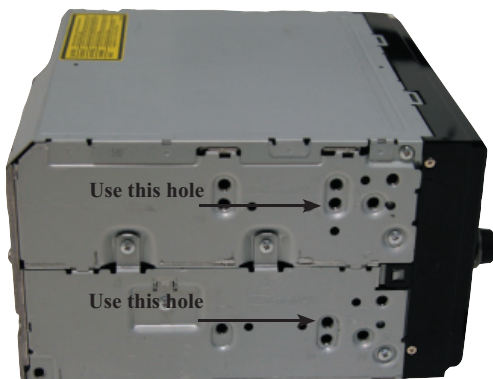

Pioneer HD1BT

We advice to use the following positions.  
Other positions are also possible.

Use position 1 marked with a cross.  
Use position 14 & 16 marked with an arrow.  
Measured from left to right.

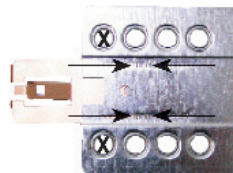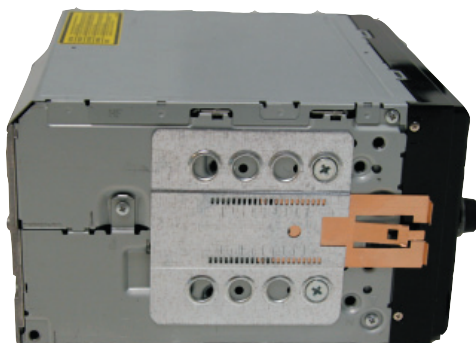


Pioneer Avic D3

We advice to use the following positions.  
Other positions are also possible.

Use position 1 marked with a cross.  
Use position 9 & 11 marked with an arrow  
Measured from left to right.

\* Mount the plates.

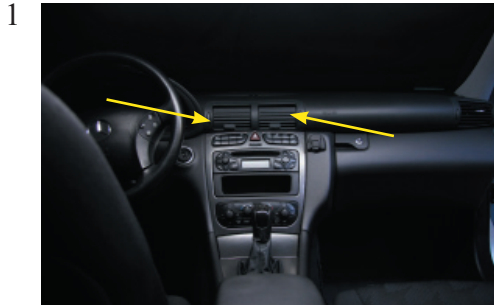

Turn the air ventilation shafts **upwards**.  
Remove the two screws.

Turn the air ventilation shafts **downwards**.  
Notice that two clips have become visible.  
Gently push them downwards. Gently pull the  
ventilation shaft towards you.



Remove the plastic trim around the gear  
lever. And remove the ashtray.



Pull the the dashboard towards you. At  
the location of the arrows there are clips  
which holds the dashboard in place.



Remove the original radio.



Place the replacement panel. Place the  
2-Din metal bracket.



Place the headunit and radio trim. Replace  
all the panels.