


2-DIN 12.301190-05



Pioneer

Installation manual for: **Mercedes Benz E-Class (W211)**

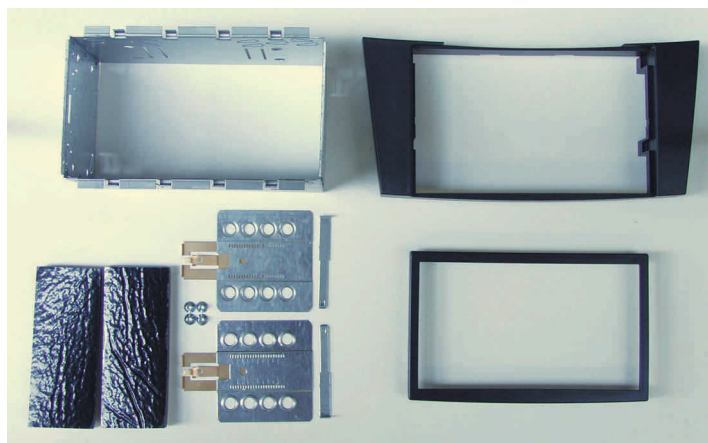

Installation kit includes the following items:



- * 1X 2-ISO 110 mm. metal bracket
- * 1X Replacement panel
- * 1X Radio trim
- * 2X Mounting plates
- * 2X Mounting spacers
- * 2X Radio removal keys
- * 4X Screws
- * 2X Cushion

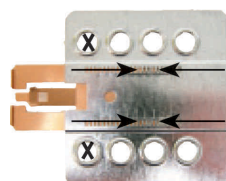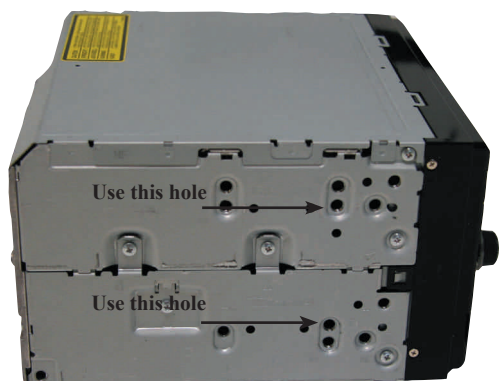

Pioneer HD1BT

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.

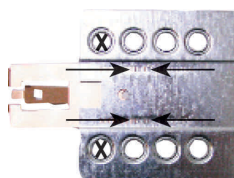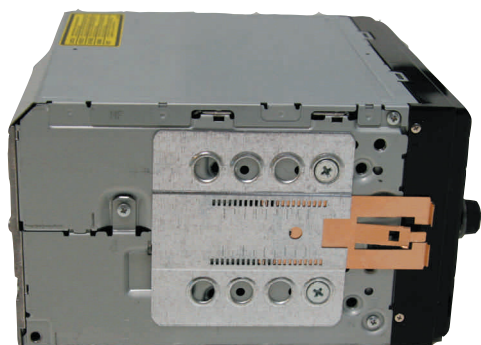


Pioneer Avic D3


We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 9 & 11 marked with an arrow.
Measured from left to right.

* Mount the plates.

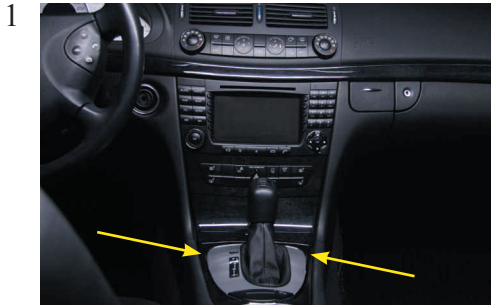

Remove the plastic trim around the gear lever. Remove the ashtray.

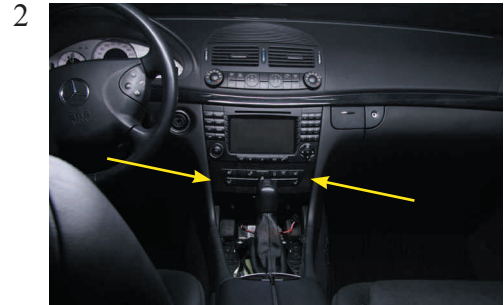

Remove the the screws and remove original storage bin/ CD changer.



Loosen the screws at the location of the arrows. This is to unlock the original head unit. The screws cannot be removed.



Place the replacement panel. Place the 2-Din metal bracket.



Place the headunit and radio trim. Replace all the panels.

Connect all of the needed wiring harnesses and check the connections carefully.