

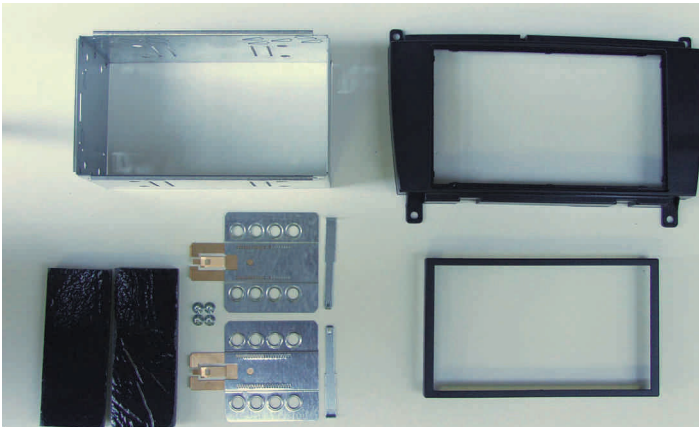


Installation manual for:
Mercedes CLK (W209) 2006 -->

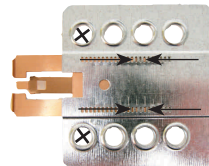

Installation kit includes the following items:



- * 1X 2-ISO 100 mm. metal bracket
- * 1X Replacement panel
- * 1X Radio trim
- * 2X Mounting plates
- * 2X Mounting spacers
- * 2X Radio removal keys
- * 4X Screws
- * 2X Cushion

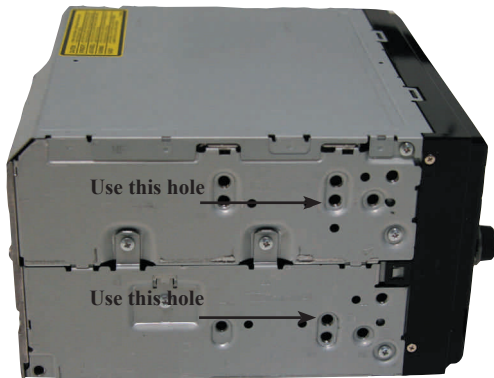

Pioneer HD1BT

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.

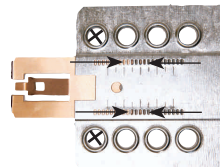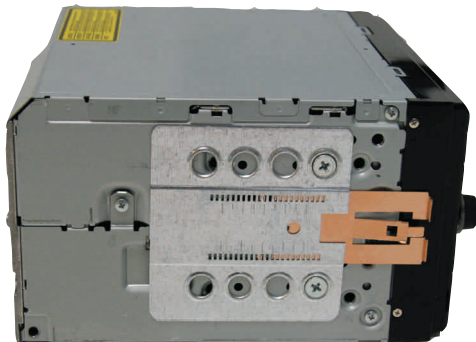

Pioneer Avic D3

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 10 & 12 marked with an arrow.
Measured from left to right.

* Mount the plates.

1



Remove with a plastic wig the wooden panel.

2



Remove the ashtray. This is a click system.

3



Remove the wooden panel with a torx 20.

4



Remove the original radio with a trox 20.

5



Place the metal 2-din bracket.

6



Place the unit and connect all the wiring.

Connect all of the needed wiring harnesses and check all connections carefully