

Installation manual for:  
**Saab 9.7 2006-->**  
**Hummer H3 (EU)**



Installation kit includes the following items:


- \* 1X 2-ISO 100 mm. metal bracket
- \* 1X Radio trim
- \* 1X Replacement panel
- \* 2X Mounting plates
- \* 2X Mounting spacers
- \* 2X Radio removal keys
- \* 4X Screws
- \* 2X Cushion



Pioneer HD1BT

We advice to use the following positions.  
Other positions are also possible.

Use position 1 marked with a cross.  
Use position 14 & 16 marked with an arrow.  
Measured from left to right.

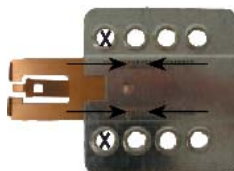

Pioneer Avic D3

We advice to use the following positions.  
Other positions are also possible.

Use position 1 marked with a cross.  
Use position 9 & 11 marked with an arrow.  
Measured from left to right.

\* Mount the plates.



Remove the dashboard panel around the radio at the location of the arrows. Then remove the original radio this is tighten by four screws. Remove the climate control unit.



Remove a piece of the plastic panel inside the dashboard at the location of the arrows.(this will give you a better position of the new headunit)



Place the replacement panel.



Place the 2-Din metal bracket. Place the climate control unit.



Replace all panels in reversed order.



Place the new headunit and the radio trim.

**Connect all of the needed wiring harnesses and check the connections carefully.**