

Pioneer 2-DIN 12.301320-00

Installation manual for

VW Golf IV / Bora / Lupo / Passat <- '04 / Polo
9N 01-> / Sharan <- '06

Seat Cordoba / Leon <- '05 / Toledo <- '05
Arosa / Alhambra

Skoda Fabia <-04 / Octavia <- '04 / SuperB

Citroën C2/ C3 / **Ford** Galaxy - > 2006

Mercedes A 01 – 04 -> 2004 W168/ M - > 2005



Peugeot 207/ 307/ **Renault** Laguna II '02 - > '05

Volvo V40/ S80 - >2006



Installation kits includes following items:

- * 1x 2-ISO metal installation bracket;
- * 2x Mounting plates for Pioneer head unit;
- * 1x radio trim for Pioneer head unit;
- * 2x radio keys for removal of Pioneer head unit;
- * 4x screws for Mounting plates;
- * 2x Cushion.

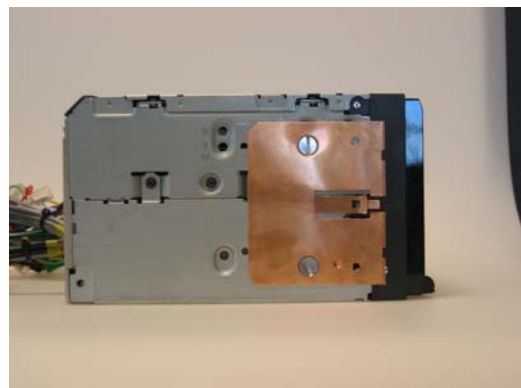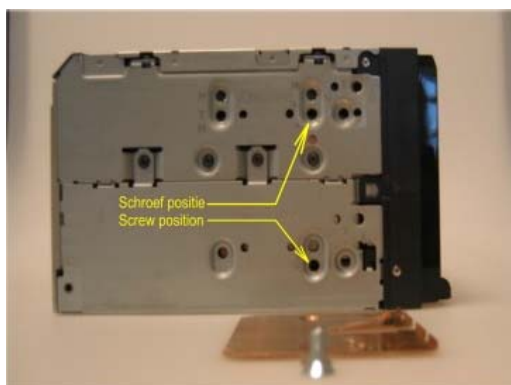

* Mount the plates like the picture above.

Pioneer 2-DIN 12.301320-00

1



Remove storage bin and/off radio.

2



Place 2 ISO bracket.

3



Connect all wiring and place head unit.

Connect all of the needed wiring harnesses and check all connections carefully