




7. Mount metal frame to dashboard and fix it



8. Mount SnapLoc Stud at rear side of Alpine INE-W928R

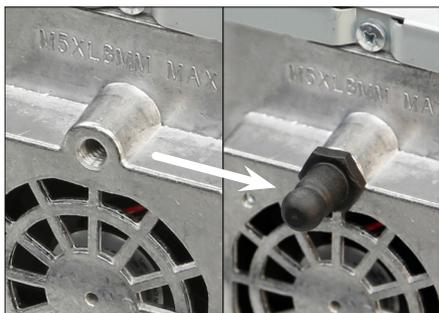

9. Connect all required circuit points and push Alpine INE-W928R into metal frame until it snaps in

*(SnapLoc stud on rear side has to snap into SnapLoc coupling)*



10. Mount facia plate to finish installation




## Installation Manual INE-W928R Kit

- Fiat Ducato 2011 -> (Type 280\* / 290\* facelift) Colour: piano-black  
Not for models with SONY OEM head unit Part-No.: KIT-8DUC

Compatible with these Alpine navigation devices

**INE-W928R**

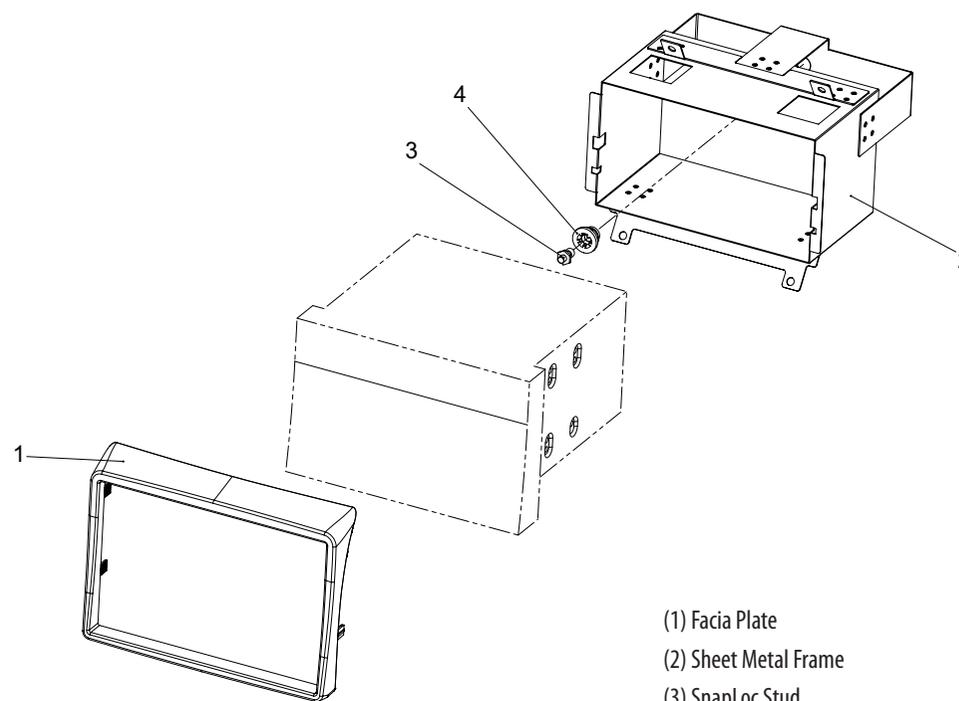


- (1) Facia Plate
- (2) Sheet Metal Frame
- (3) SnapLoc Stud
- (4) SnapLoc coupling

*All installation work must be performed by a qualified professional installer only.  
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.*




1. Remove OEM head unit and pocket

*Special tools like radio release keys may be required.*

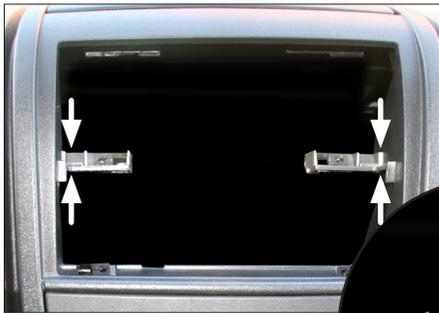

2. Cut away original brackets (marked with arrows) with appropriate tools to clear space

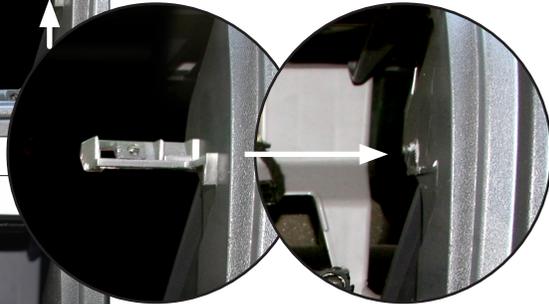


3. Ducato dashboard after cutting away brackets



4. Cut away plastic here in order to clear space for INE-W928R  
See sample photos at the right for details


*CAUTION: Don't cut until the edge of the frame because the gap can not be covered afterwards*

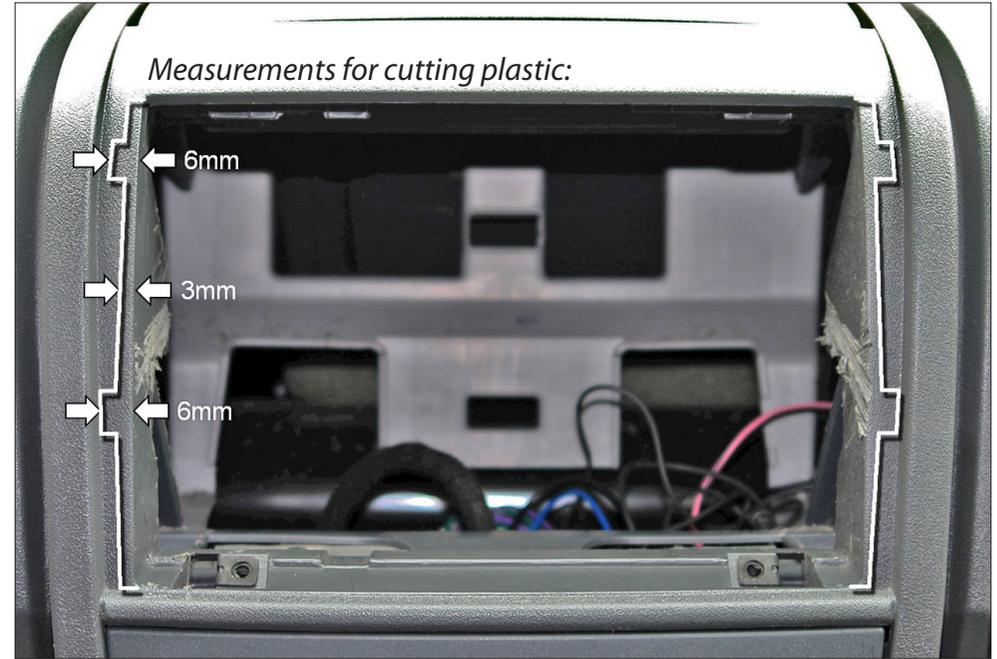

*Measurements for cutting plastic:*



5. Ducato dashboard after plastic was cut away

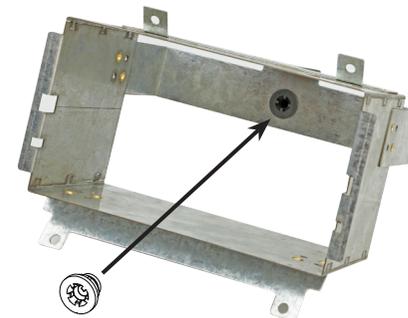

6. Prepare metal frame:

Push SnapLoc coupling into metal frame until it snaps in (see arrow)