

# CA-BC-VAG.002




## Interface for original rear view camera "low" Interface für original Rückfahrkamera „low Variante“



„low“

- only camaresystem
- fixed lanes (lanes don't move)

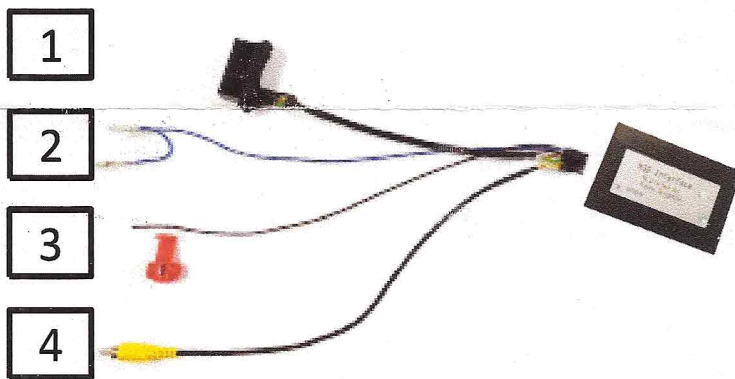

VAG

various vehicles with  
„low camera“

1. Connect 26pole connector to vehicle
2. Connect blue wire to remote output from radio
3. Connect black wire to vehicle ground
4. Connect yellow RCA-cable to rear view camera input

Subject to change in terms of construction, equipment and color, and may obtain errors. The information and illustrations are non-binding.  
Die Beschreibung kann von der tatsächlicher Ausstattung abweichen. Änderungen in der Ausstattung und Farbe sowie Irrtum vorbehalten. Daten und Abbildungen unverbindlich.  
Sous réserve de modification de la construction, de l'équipement, de la couleur et sous réserve d'erreurs. Les indications et les illustrations sont sans engagement.  
Wijziging met betrekking tot constructie, uitvoering en kleur evenals vergissingen voorbehouden. Gegevens en afbeeldingen niet bindend.