




Fitting Instruction

Double Din Installation Kit - Fiat 500


CA-HM-FIA.003BL: Piano Black CA-HM-FIA.003WH: Pearl Grey

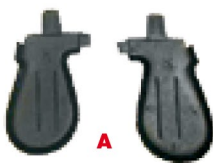


A Paddles for air vents




B Foam

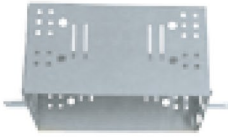

C Metal Cage

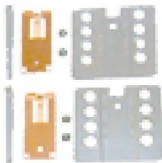

D Side Brackets


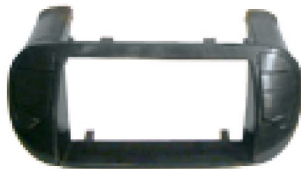


E Facia Panel




1. Remove the original radio and air vent cover.

5. Apply the side brackets (D) to the head unit using the screws provided. Set the depth as required.

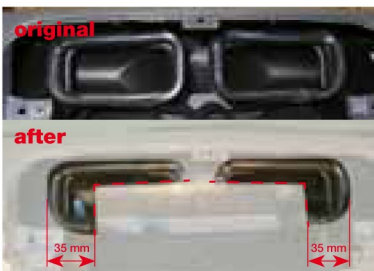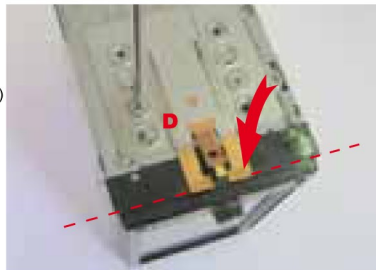

2. Without removing, cut the front of the air vent duct as shown. It is recommended to offer the cage to the opening to ensure the correct measurement before making the final cut.

6. Insert the head unit into the cage (C) until the springs click and fully engage.

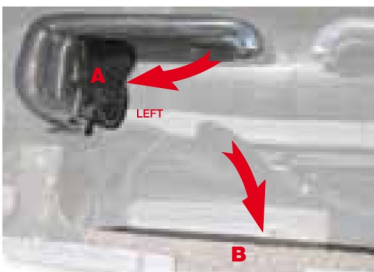

3. Insert the paddles (A) into the cut ducts, using the 'U' section to guide into the correct position. Remove the backing paper from the foam (B) and stick in central position as shown.

7. Using a screwdriver, push the paddles (A) against the side of the head unit to ensure correct airflow from the ventilation ducts.



4. Locate the cage (C) in position, ensuring correct alignment to the foam block and screw as shown.

8. Carefully apply the fascia panel (E). Locate the top clips and then the lower section.






Instructions de Montage

Kit d'installation double DIN - Fiat 500


CA-HM-FIA.003BL: Noir Piano CA-HM-FIA.003WH: Gris Perle

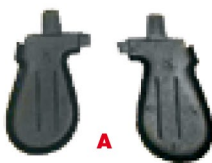


A Pattes pour aérateur




B Mousse protection

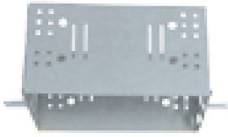

C Cadre de montage métallique

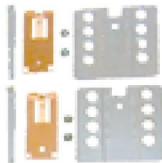

D Etriers latéraux


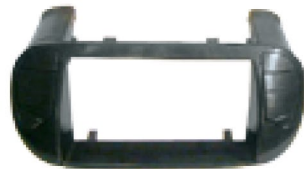


E Enjoliveur 2 DIN




1. Retirer l'autoradio et les aérateurs d'origines.

5. Installer les étriers (D) sur le système 2 Din Pioneer

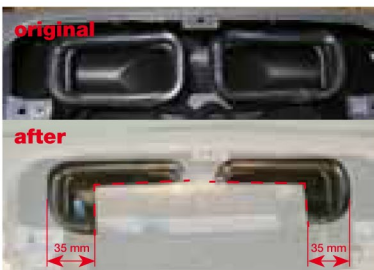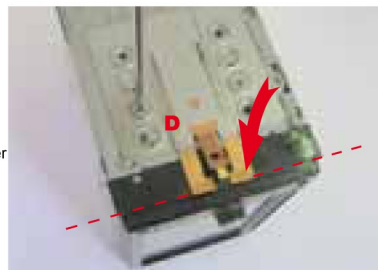

2. Sans le retirer, découper l'avant des conduits d'aération comme indiqué sur la photo. Il est recommandé d'approcher le cadre de montage pour vérifier les côtes avant le découpage.

6. Insérer le système Pioneer dans le cadre de montage métallique.

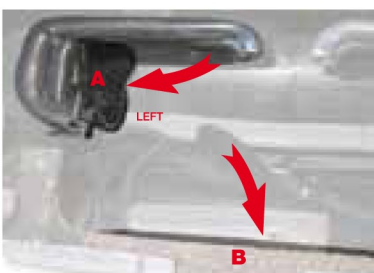

3. Insérer les pattes plastique (A) dans les parties découpées des conduits d'aération. Coller la mousse de protection (B) comme indiqué sur la photo.

7. Utiliser un tourne vis pour pousser les pattes (A) contre le système Pioneer 2 DIN, et assurer un fonctionnement normal du système de ventilation.



4. Fixer le cadre métallique (C), vérifier l'alignement du cadre en vissant comme indiqué sur la photo.

8. Positionner l'enjoliveur (E). Clipser le haut du produit puis le bas.



Installation Guide

CTBLUE&MELEAD

This lead allows the user to maintain the use of the vehicles factory USB connector with a USB compatible aftermarket head unit.

1. Disconnect plug from Blue and Me module
2. Connect plug disconnected from Blue and Me module and connect to (C).
3. Connect (A) to the USB input on the aftermarket head unit.
4. Connect (B) into the Blue and Me module

