

Installation Manual


Nissan Qashqai SWC

CA-R-NI.005AF


- 1 Remove the original head unit. Connect the ISO to the radio harness, the SWC Jack, and all other needed connectors.



- 2 Connect the grey-red (CAN-H) and the grey-blue (CAN-L) cables to the vehicle's OBD connector (which is located under the steering wheel), **only** if the rear view camera is installed.


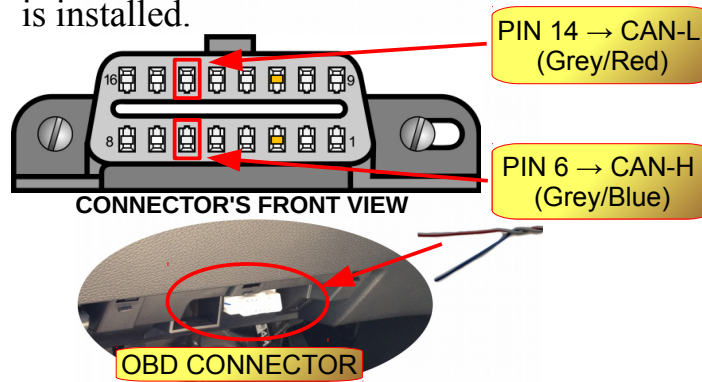


- 3 Plug-in all connections. Verify the proper functioning of the system.

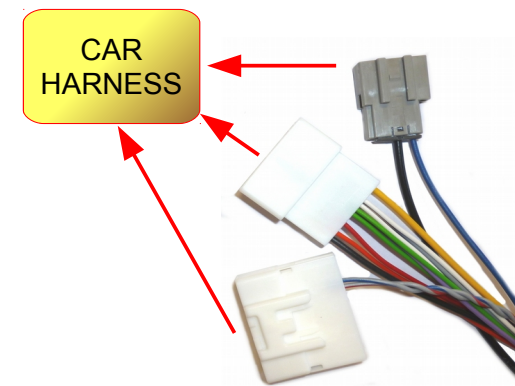

DOCUMENTS TO BE ATTACHED TO THE CUSTOMER'S VEHICLE -- INSTRUCTION FOR SETTING THE CLOCK ON THE VEHICLE'S DISPLAY


- 1 Press the ENTER button on the steering wheel and scroll with the up/down arrows until the brand of the radio unit is displayed. Press the ENTER button and hold it until the display shows the "CH TIME" message.

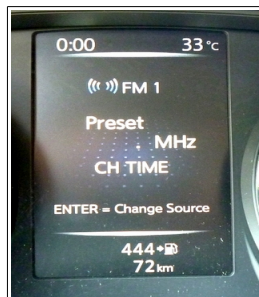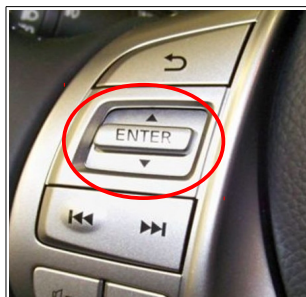

- 2 Use the buttons:

- SEEK+ to increase minutes
- SEEK- to increase hours

Press the ENTER key to confirm the changes.

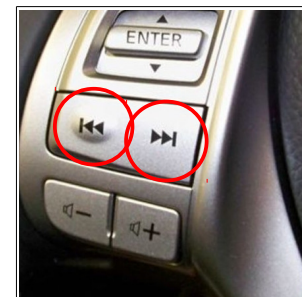


Installation must be performed by a qualified professional installer only, with appropriate equipment. The manufacturer is not liable for any kind of incidental or indirect damages.

03/2015 All rights reserved. No liability for misprints

Pioneer


4 Connect the green cable and the other services to the radio harness.

NOTE: the parking service (Green) isn't directly plugged at the handbrake but it is fit to active when the car have a speed lower than 5Km/h.

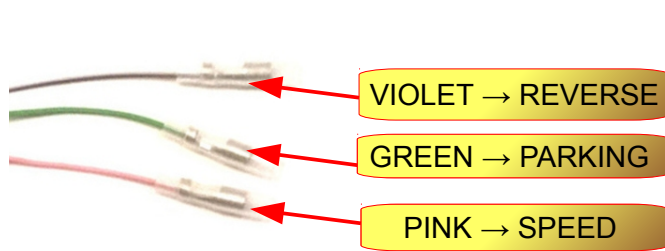

5 There are two possible ACC signals:

- the aftermarket radio will switch off when the keys are in the position zero. The red cable is connected to (WIRED ACC).

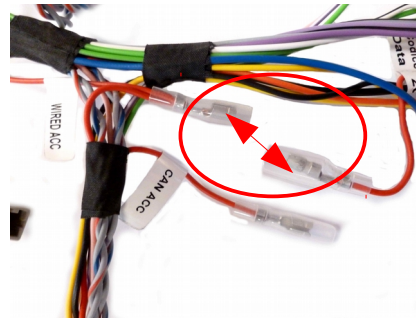

- the aftermarket radio will switch off when you pull out the keys or the keys are in the position zero and you open the car door. The red cable is connected to (CAN ACC).



Pioneer