



## SCHEMA DI MONTAGGIO - ASSEMBLY SCHEDULE

COD. 58.0574.00

REV. 00 DEL. 28/08/2013 TEC-LOG G.D.

Descrizione Opel Adam

Fig. 1

- 🇮🇹 Innestare il posteriore sul centrale originale;
- 🇬🇧 Insert the rear silencer into the original centre silencer.
- 🇫🇷 Insérer le silencieux dans l'intermédiaire d'origine.
- 🇪🇸 Conectar el escape trasero al tramo intermedio de serie.
- 🇩🇪 Fügen Sie den Esd in den Msd ein.

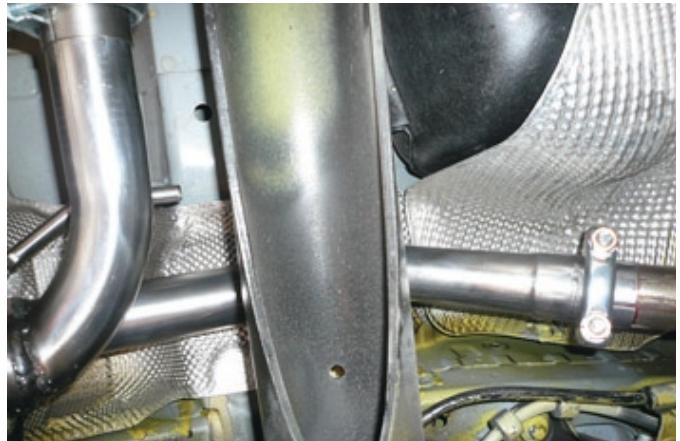


Fig. 2

- 🇮🇹 Fissare la staffa in dotazione, come in figura!
- 🇬🇧 Fix the bracket in equipment as shown in the picture!
- 🇫🇷 Fixer l'étrier en dotation comme montré dans l'image!
- 🇪🇸 Fijar el estribo en dotación, como en la imagen!
- 🇩🇪 Fixieren Sie die Schelle des Montagekits wie in der Abbildung!



Fig. 3

- 🇮🇹 Agganciare il tubo a destra e stringere tutti i dadi!
- 🇬🇧 Hook the right tube and tighten all nuts.
- 🇫🇷 Accrocher le tube de droite et serrer les écrous.
- 🇪🇸 Enganchar el tramo a la derecha y apretar todos los tornillos.
- 🇩🇪 Installieren Sie das rechte Rohr und ziehen Sie alle Muttern.

