

### ATTENTION: CHANGE TIME MENU

- The vehicle must be stationary with the handbrake on
- Turn on the vehicle (Key in pos. n°2)
- Wait ignition radio
- Press button number 9 (5 secs)
- Use "Seek Up" and "Seek Down" to change the minutes
- Use "Vol+" and "Vol-" to change the hours
- Press button number 9 to exit the menu

### ATTENTION!

For your information this installation kit is only compatible for the original radio unit shown in the picture.



Steering wheel control interface installation kit for:

# **HONDA**


Model: HR-V / JAZZ only for vehicle Honda Connect;

Year: 2015>

Kit content: SWC CANBUS interface

wiring harness antenna adapter radio adapter voltage stabilizer amplifier interface

Customer code: CA-R-HO.009AE

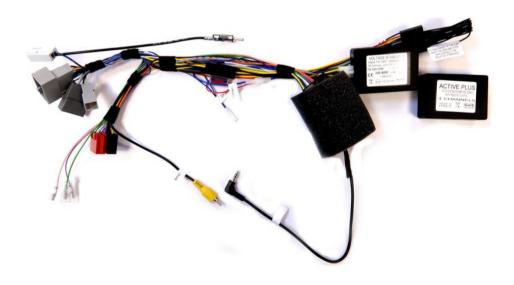


## INSTALLATION MANUAL

All installation work must be performed by a qualified professional installer only.

The manufacturer / dealer is not liable for any kind of incidental or indirect damages.

06/2016 ALL RIGHTS RESERVED. Technical changes possible. No liability for misprints.

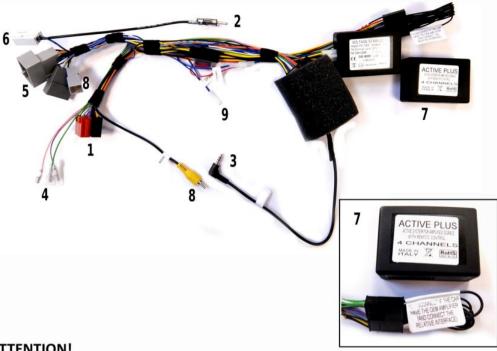

## ATTENTION!

In order to prevent ESD damage, the WHEEL REMOTE JACK must be connected before plugging in the connectors on car side.

## Connect cables to the radio side as follow:

- 1- to ISO CONNECTOR (black and red housings)
- 2- to RADIO ANTENNA-CONNECTOR
- 3- to WIRED REMOTE SOCKET (NOTE: do not connect to microphone socket)
- 4- to SERVICES (if required); function is marked on the wire:

Green - Parking Violet/White - Reverse Pink - Speed

## Connect cables to the car side as follow:

- 5- to CAR CONNECTORS
- 6- to CAR ANTENNA-CONNECTOR
- 7- to disconnect if the car have OEM amplifier (and connect the relative interface **ACTIVE PLUS)**
- 8- to SUBWOOFER (if the vehicle is equipped)
- 9- the harness provides the ignition signal via Canbus. If you want to use the ignition by wire connect the "WIRED IGNITION" bullet and not the "CAN ACC" bullet.





The steering wheel buttons perform the following functions (if supported by the radio):

- 1- Volume +
- 2- Volume -
- 3- Accept incoming call
- 4- Reject incoming call
- 5- Seek up
- 6- Seek down
- 7- Source
- 8- Voice
- 9- Change time menu

cut along the dotted line - copy for the vehicle owner